

AIR MIXER LUX

WIRELESS AIR MIXER FOR SAUNA

OPTION 1

Usage in Sauna:


The Air Mixer is allowed to be installed only on the floor, away from the sauna heater.

OPTION 2

Indoor Usage:


The Air Mixer can be installed on any horizontal surface.

Aroma Container

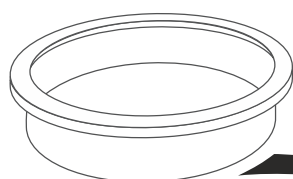


2. Install the aroma container onto the lower ring located at the top part of the housing.

OPTION 2
AROMA DIFFUSER

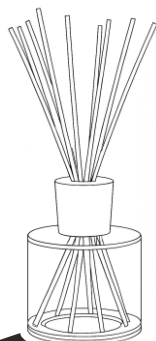


OPTION 1
ESSENTIAL OIL

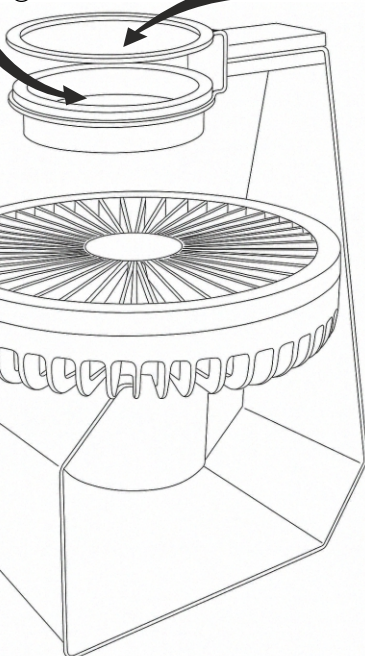

1. Install the fan into the lower part of the metal housing of the air mixer.

Fan Unit

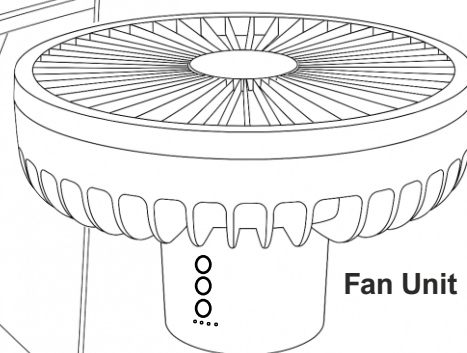



3. Carefully pour 20 ml of clean water into the aroma container. Add 5–10 drops of essential oil, depending on the desired intensity of the fragrance.

4. To turn on the Air Mixer, use the remote control or press the power button on the fan unit.

OPTION 2

3. Place the fragrance bottle into the aroma container.

4. To turn on the Air Mixer, use the remote control or press the power button on the fan unit.

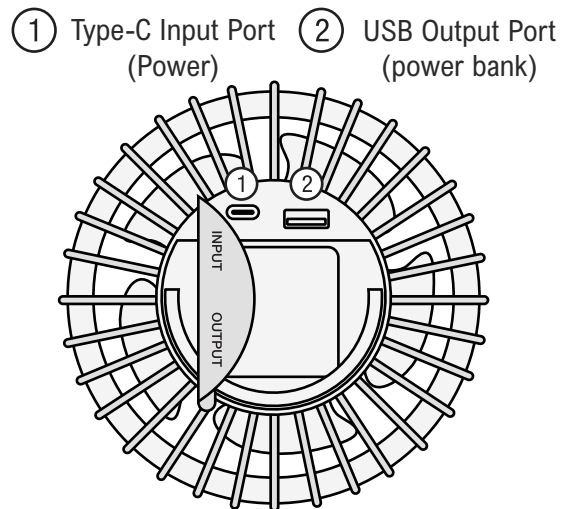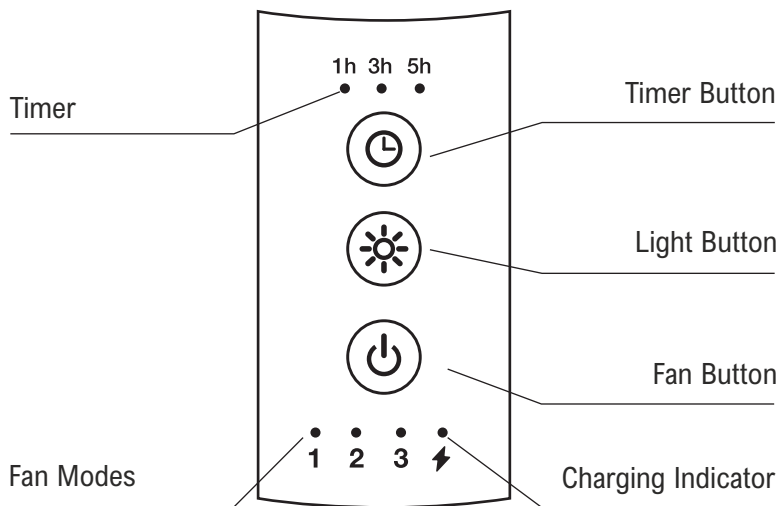

FAN FUNCTIONS

- Press fan button once → Slow mode
- Press fan button twice → Intensive mode
- Press fan button three times → **Sauna mode**
- Press fan button four times → Wind mode
- Press fan button five times → Fan off
- Repeat Cycle

LIGHTING FUNCTIONS

- Press light button once → White light
- Press light button twice → RGB mode
- Press light button three times → Light off
- Repeat Cycle

TIMER FUNCTIONS

- Press timer button once → 1 hour
- Press timer button twice → 3 hours
- Press timer button three times → 5 hours
- Press timer button four times → Timer off
- Repeat Cycle

CHARGING INDICATOR

- Blue light – USB output is active
- Red light – battery is charging
- Green light – battery is fully charged
- Flashing red light – battery is low

DEVICE SPECIFICATIONS

Input Voltage: DC 5.0 V / 2.0 A
 Current Consumption: 0.8–1 A
 Power Output: ≤ 10 W
 Product Weight: 730 g
 Battery Capacity: 10,000 mAh
 Materials: ABS plastic, silicone, PCBA, aluminum
 Dimensions: 220 × 220 × 270 mm
 Country of Origin: China

Power Bank Mode Support:

The device is equipped with a USB output, allowing it to be used as a portable power bank for charging phones and other devices.

Note: When using the device as a power bank, it is not recommended to operate the fan at high power simultaneously.



FAN MAINTENANCE

For optimal performance, it is recommended to clean the fan regularly.


Important: Over time, dust can accumulate on the fan blades, which may reduce the strength of the airflow.

Fan Cleaning:

1. Remove the top grill by turning it counterclockwise.

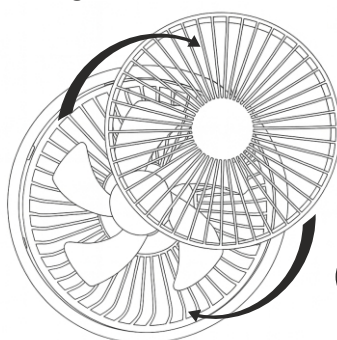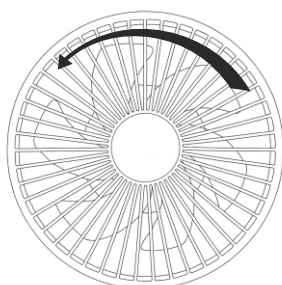

2. Gently wipe the fan blades and protective grill with a soft damp cloth. Do not use harsh cleaning agents.

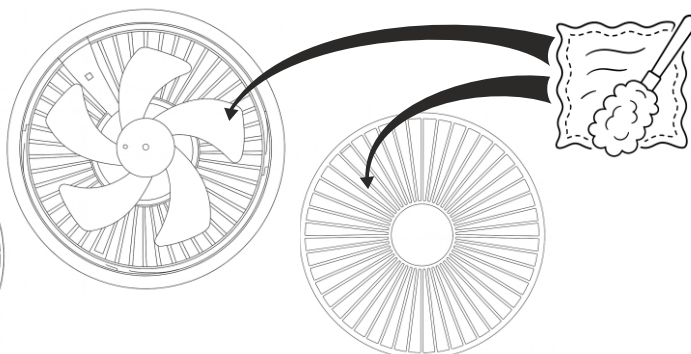

3. Reattach the grill by turning it clockwise until it is securely fixed.